

High Security Deadbolt Locking Handle from Nor-Lake

All Nor-Lake Walk-ins and Environmental Rooms are Now Standard with the High Security Deadbolt Locking Handle



Nor-Lake's Deadbolt Locking Handle

- Nor-Lake Deadbolt Locking Handle carries both a Design and a Mechanical Patent and is available only from Nor-Lake.
- This handle, offering more security and additional locking features, is now being installed on all standard walk-in doors from Nor-Lake at no additional cost!
- The Deadbolt Locking Handle incorporates a deadbolt style lock which can be independently locked with a key and/or padlock.
- This is the only deadbolt lock designed to be used on walk-in coolers and freezers.
- The entire locking mechanism is on the frame portion of the door section.
- There are no parts between the door and frame requiring alignment, therefore, no operational concerns.

800-955-5253 Foodservice
800-477-5253 Scientific

Equip Your Walk-In with High Security...


- There are no exposed screws on the locking mechanism.
- The locking mechanism cannot be removed from the exterior of the door frame. Even if the handle is taken off the door (while in the locked position), the door will remain securely locked by the deadbolt which remains extended over the exterior of the door.
- The locking mechanism includes an inside release knob which allows the easy exit from the walk-in should someone be locked inside.
- The handle can also be locked in the fully unlocked position, with key and/or padlock. This prevents the unauthorized locking of the door.

NORLAKE®


Specifications

Model NL9800 Deadbolt Locking Handle With Independent Key/Padlock Feature:

Bright polished chrome finish with deadbolt that can be independently locked with either key or padlock. Deadbolt can be locked in the unlocked position to prevent unauthorized locking of the door. Locking mechanism with inside release knob is mounted on the frame side of the door opening and includes no moving parts through frame. This design eliminates any possibility of lock freeze-up. Locking mechanism has no exposed fasteners to give maximum tamper resistance. Locked door cannot be opened even if handle is removed from the door.

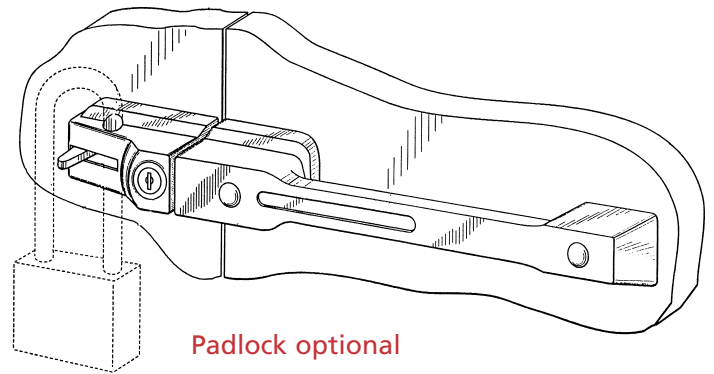

Deadbolt Locking Handle

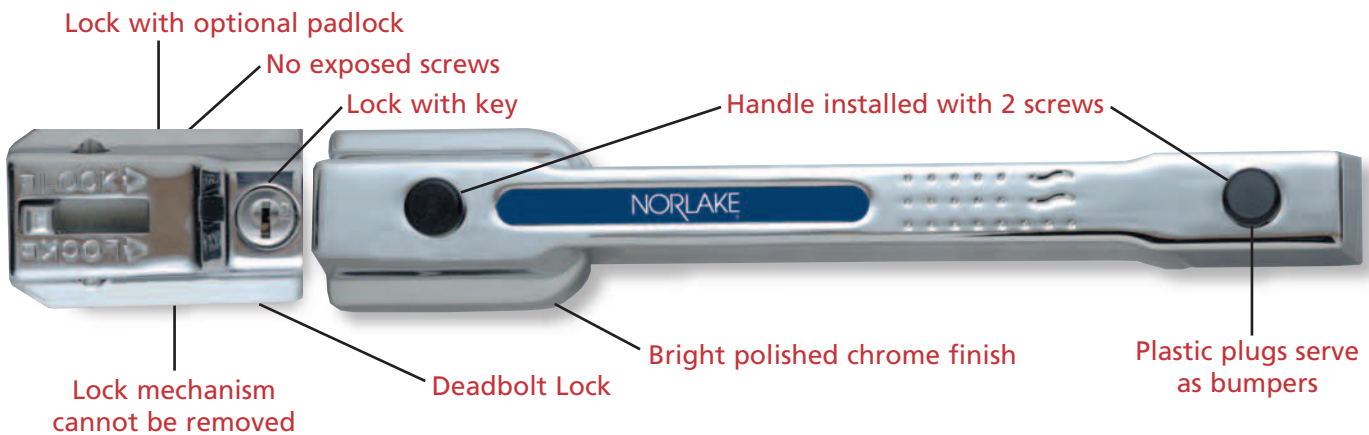

Retrofit Kit

Nor-Lake offers the NL9800 Deadbolt Locking Handle in an easy to install retrofit kit, for flush mount (infitting) doors,



which allows you to upgrade your existing cooler or freezer on site. This kit is designed with stainless steel mounting plates that cover all the old mounting holes which remain after you have removed your old handle. The standard kit and plate system will work with any brand of walk-in that has a 4" thick wall and is equipped with a flush mount (infitting) door. (Part #108929)

ISO 9001:2000
Registered to ISO 9001:2000
File No. A3204



Call Us at
800-955-5253 Foodservice
800-477-5253 Scientific

NORLAKE

NOR-LAKE, INCORPORATED
727 Second Street
Hudson, Wisconsin 54016
800-955-5253 Foodservice
800-477-5253 Scientific
800-388-5253 PARTS
715-386-6149 FAX
www.norlake.com
6/05 101522