



REFRIGERATION SYSTEMS

CAPSULE PAK™ SYSTEMS

Capsule Pak systems are self-contained with condensing unit and evaporator coil in one housing for simple installation.

- Temperatures: +35°F, -10°F and -20°F
- Flush coil increases usable interior space
- Automatic condensate vaporizer. No drain line required on many models
- No walk-in penetrations for drain lines on outdoor or remote units

Ceiling Mount

- Conveniently located on top of the walk-in to maximize available storage space
- Available on indoor and outdoor models
- For single rooms or combination walk-ins

Wall Mount

- Designed for areas where there's not enough room for a ceiling mounted application
- Available on indoor and outdoor models
- For single rooms or combination walk-ins

Remote Capsule Pak

- Enviro-Control™ included as standard (see page 2)
- Include ambient controls and weather-proof hoods
- Precharged systems with quick connects for simple field connections to precharged lines



Indoor ceiling mount Capsule Pak



Outdoor ceiling mount Capsule Pak



Indoor wall mount Capsule Pak



Enviro-Control included as standard on remote Capsule Pak models

COPELAND SCROLL™ COMPRESSORS

Nor-Lake uses Copeland Scroll™ compressors for the most efficient engineered refrigeration systems possible. Scroll compressors offer:

- Increased reliability and extended equipment life due to fewer moving parts
- Up to 20% energy savings and consistent long-term operation over reciprocating compressors
- Liquid line injection on low temp systems further improves performance in high ambient environments
- Quieter operation



800-955-5253 | norlake.com


REFRIGERATION SYSTEMS

Split-Pak™ Pre-Assembled Remote Systems

Split-Pak models are pre-piped and pre-wired for quick and easy installation.

- Balanced remote refrigeration systems
- Available with pre-charged line lengths from 5' to 50'
- Pre-charged systems include quick connect fittings for easy installation
- UL approved systems

Systems equipped with Copeland Scroll™ compressors

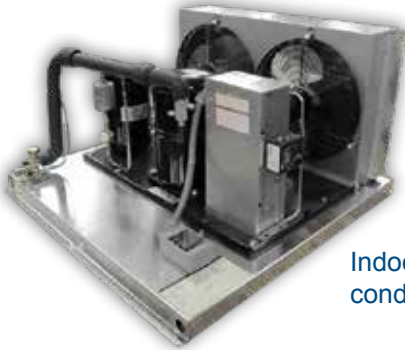

Indoor Split-Pak condensing unit



Outdoor Split-Pak condensing unit

Enviro-Control™

Enviro-Control is a highly efficient electronic controller designed to increase reliability and food safety while reducing operating costs. Enviro-Control is a custom-designed option for Nor-Lake refrigeration systems including remote Split-Pak and Capsule Pak systems.

- Provides precise control for critical functions including evaporator fans, room temperature, electronic expansion valve and defrost
- Energy saving features include demand defrost and automatic fan cycling
- Alerts, text messages and emails received on your phone, computer or tablet
- Monitor and control your system from your desktop, smartphone or tablet (when using optional router)



Enviro-Control allows you to adjust many functions of your refrigeration system through a simple interface.



727 Second Street | Hudson, WI 54016
800-955-5253 | 715-386-6149 FAX
www.norlake.com



Revision Date: 6/18
Part Number: 168859

